

Fixed Mount Instructions


Mounting Hardware included / Per Pair of Shutters

4 Aluminum "L" Brackets The Same Width As Shutters

4 Aluminum "L" Brackets 2" tall if shutters are over 55" in height.

8 - Stainless Steel 1" Screws (12 if shutters exceeds 55")

8 - Stainless Steel 1.5" Screws (12 if shutter exceeds 55")

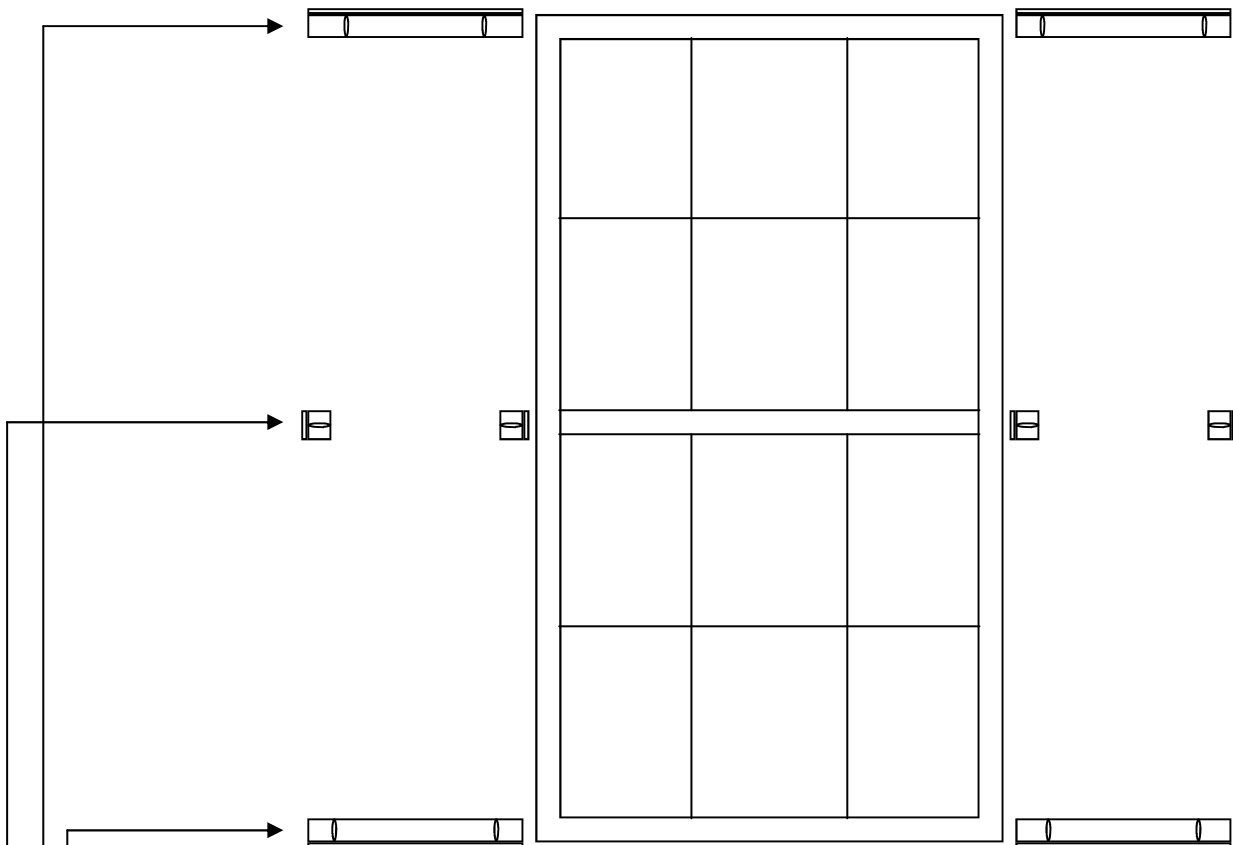

Determine proper position for mounting brackets using above diagram. Drill holes in house for long screws included in packet.
Drill 1/4" hole to insert plastic anchors if in masonry

Measure up height of shutter and drill holes for top brackets. And screw all brackets to wall.

If Shutter Exceeds 55", additional small brackets are included to mount as shown in center of shutter.

If Shutter is an Arch Top, an additional small bracket will be included to secure the arch. Install it mid point of arch.

Sit shutter on lip of bracket and push back as far as possible. Mark shutter to pre-drill holes into shutter from top and bottom of mounting brackets. Use a 1/8" bit for this step. You can also leave shutter in proper position and drill into shutter while it is sitting on bracket if you have someone to help you hold shutter panel.. Do not insert screws without pre-drilling. It will split the material.

Insert Short screws thru bracket and into shutter panel. Tighten screws snugly. Do not over-tighten.

Painting Recommendations

Before painting, lightly sand primer with a fine grit sandpaper or sanding sponge. A sanding sponge works equally as good or better than paper.

Use a clean cloth or compressed air to remove any dust created from sanding.

Apply a good quality latex paint on top of the sanded primer. Follow paint manufacturers instructions.

Let paint dry per paint manufacturers instructions.

Apply second coat, after sufficient drying time.

DO NOT allow the shutters to stay in the sun and get hot before painting.

Do NOT let shutters dry in the sun after painting.

Follow paint manufacturers instructions at all times.

DO NOT lean shutters against one another, even if the paint feels dry. **They will stick.**